
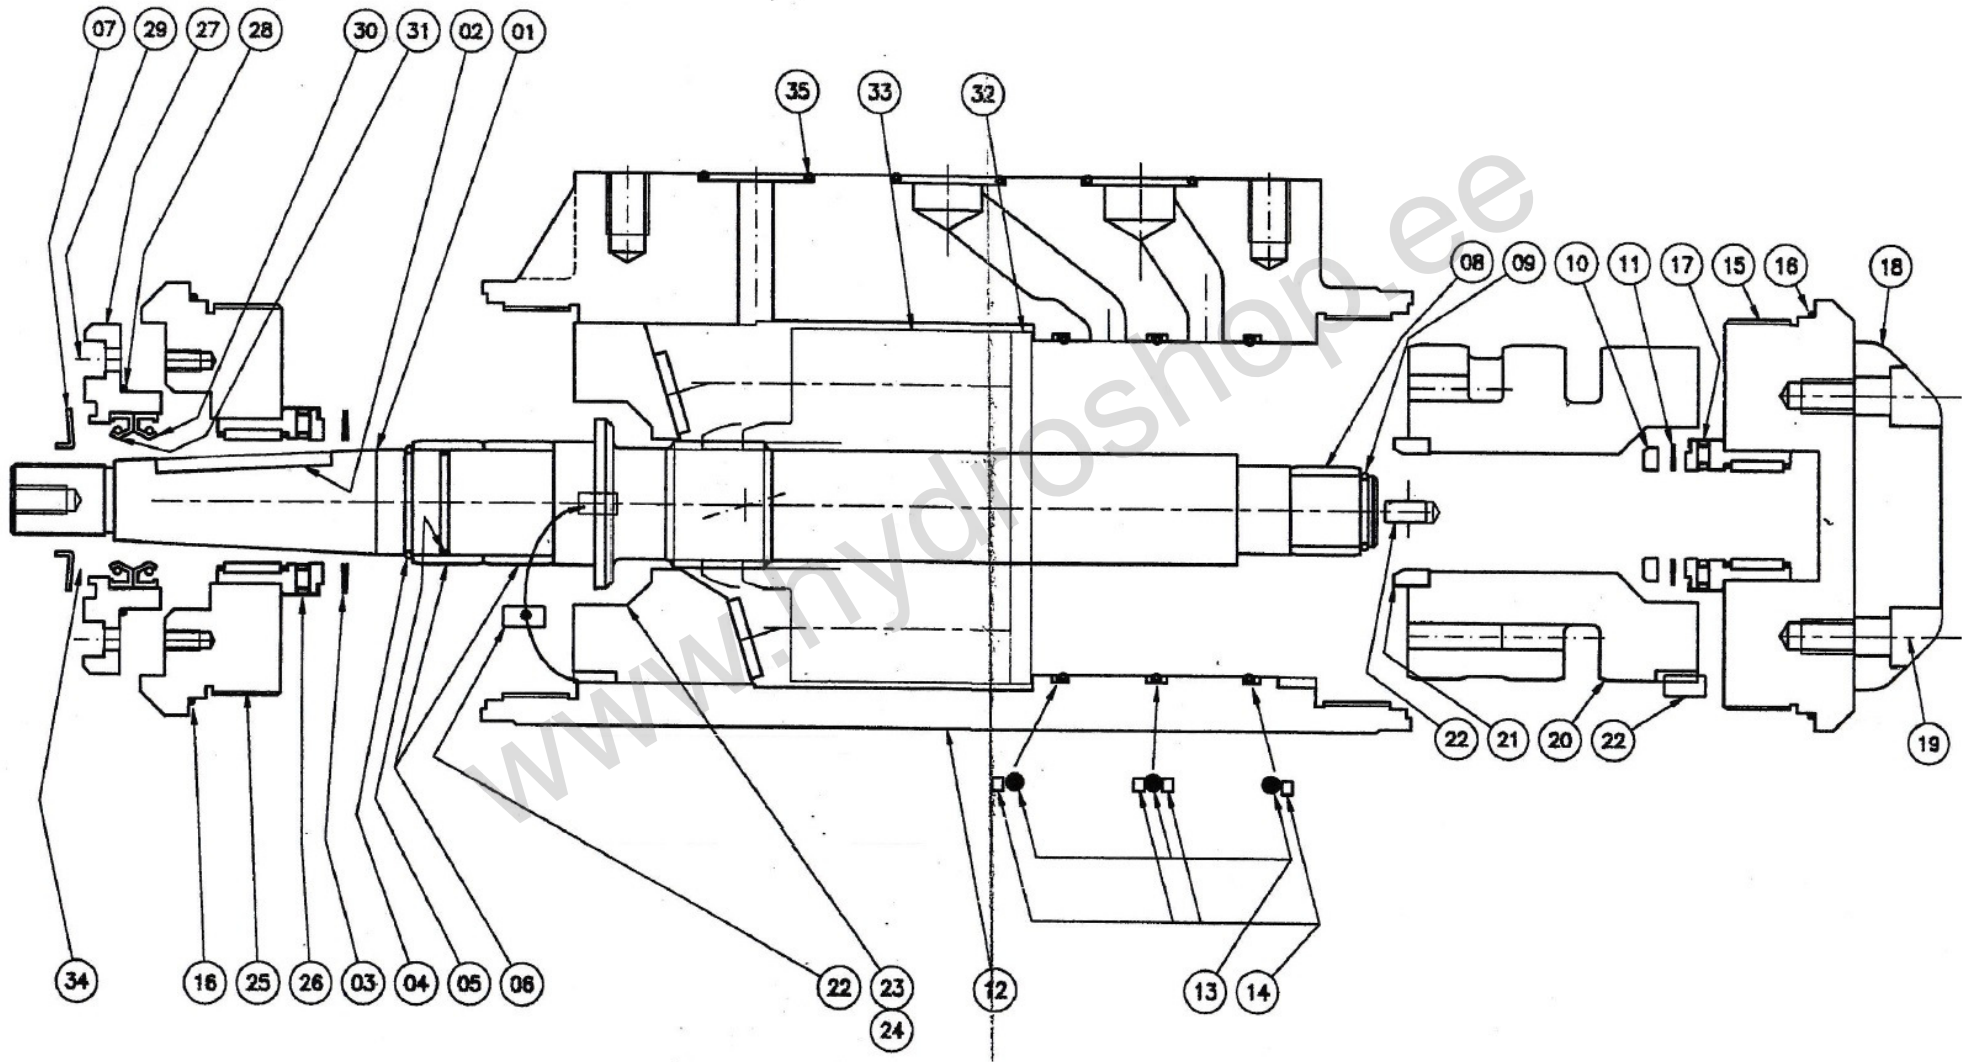


MHDU3-65 Rotor Drive Spare parts

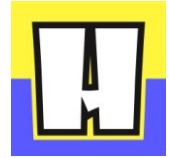

MH DU3-65 Rotor Drive Spare parts

- 1) shaft
- 2) key
- 3) spring space (if it is necessary)
- 4) circ clip
- 5) o ring
- 6) ring for bearing
- 7) stop ring (used on the first type only)
- 8) ring for bearing
- 9) circ clip
- 10) spacer
- 11) spring space (if it is necessary)
- 12) body
- 13) o ring
- 14) antiextrusion ring
- 15) end cover
- 16) o ring
- 17) rear bearing
- 18) zinc anodi
- 19) bolt
- 20) distributor
- 21) balanced ring
- 22) pin
- 23 + 24 inclinate plate
- 25) front cover
- 26) front bearing
- 27) plate for seal
- 28) o ring
- 29) bolt
- 30) internal shaft seal
- 31) external shaft seal
- 32) pressure plate
- 33) piston rotating group
- 36) ring for seal (stainless steel metal)