

COILS (DG4V-3S-60 STANDARD VALVE)

CODE	VOLTS AC		FLYING LEAD COIL	DIN COIL
	50 HZ	60 HZ		
NN	24		02-111630	02-111255
N	24	24	02-111631	02-111541
K	48	48	02-111633	02-111542
A	110		02-101730	02-101725
EK		115	02-111635	02-111258
B	110	120	02-101731	02-101726
DN		220	02-111638	02-111545
D	220	240	02-101733	02-101728
EM		440	02-111643	02-111262

COILS (DG4V-3-60 HIGH PERFORMANCE VALVE)

CODE	VOLTS AC		FLYING LEAD COIL	DIN COIL
	50 HZ	60 HZ		
NN	24		865853	865835
N	24	24		
K	48	48		
A	110		508166	507825
EK		115	866458	866456
B	110	120	508169	507833
BL	110	120	698563	698562
DN		220		02-124586
D	220	240	508170	507834
EM		440	865836	865856

COILS (DG4V-3(S)-60 STANDARD/HIGH PERFORMANCE VALVE)

* Available For High Performance Valve Only

CODE	VOLTS DC	FLYING LEAD COIL	DIN COIL
G	12	508172	507847
GL*	12	508175	507855
H	24	508173	507848
HL*	24	508174	507852
DK	32	865863	865881
OJ	48	865864	865882
DM	80	865865	865883
DJ	98	865639	865637
P	110	865866	865884
DP	125	865867	865885
Z	180	865868	865886
EJ	196	865640	865638
S	220	865869	865887




CAUTION

Electrical power must be disconnected before removing/replacing terminal block, receptacle plug, indicator lights or limit switch.



DG4V-3(S)-FTJ/FTW-60

Terminal block.

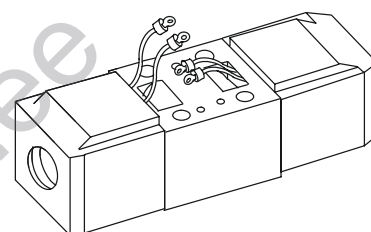
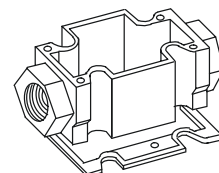
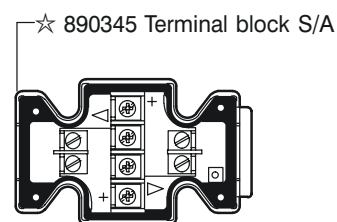


NOTE

Refer to valve model drawing for balance of part numbers.

DG4V-3(S)-FTJL/FTWL-60

Terminal block with lights.

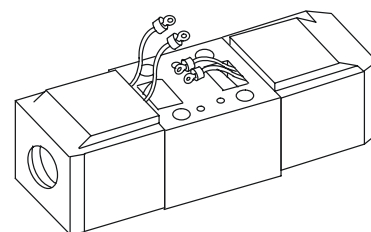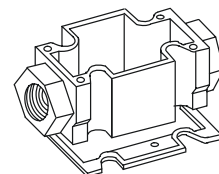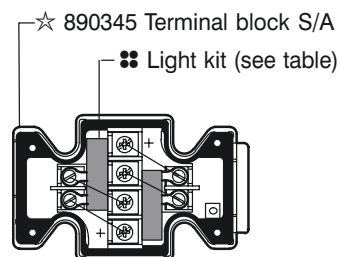

NOTE

Refer to valve model drawing for balance of part numbers.